

SPECIFICATIONS—(Continued)

	Torqueflite For Six Cylinder Models	Torqueflite For Eight Cylinder Models
THRUST WASHERS		
Reaction Shaft Support to Front Clutch Retainer (Selective)	—	.043 to .045 inch (Natural)
	—	.061 to .063 inch (Green)
	—	.084 to .086 inch (Red)
	—	—
Sun Gear Driving Shell060 to .062 inch	—
Driving Shell (Steel)034 to .036 inch	—
Overrunning Clutch Race060 to .062 inch	—
Kickdown Annulus Support121 to .125 inch	—
Front Clutch to Rear Clutch043 to .045 inch	—
Front Clutch to Reaction Shaft Support043 to .045 inch	—
Output Shaft to Input Shaft	—	.062 to .064 inch
Sun Gear Driving Shell Thrust Plate (Steel)	—	.034 to .036 inch
Rear Planetary Gear to Driving Shell	—	.062 to .064 inch
Front Planetary Gear to Annulus Gear Support	—	.062 to .064 inch
Front Annulus Gear Support to Driving Shell	—	.062 to .064 inch
Front Clutch Piston Retainer to Rear Clutch	—	.061 to .063 inch (Green)
Piston Retainer	—	—

SPECIAL TOOLS

6 and 8 Cyl. Vehicles

C-452	Puller—Companion Flange
C-484	Pliers—Snap Ring
C-763	Switch—Remote Control Starter
C-3203A	Jack—Transmission
C-3229	Pliers—Snap Ring
C-3281	Wrench—Companion Flange Holding
C-3288	Studs—Pilot
C-3292	Gauge—Low Pressure
C-3293	Gauge—High Pressure
C-3335	Straight Edge
C-3339	Dial Indicator
C-3422	Compressor—Engine Valve Spring
C-3705	Adapter—Transmission Band Adjuster (Use with C-3380 Torque Wrench)
C-3749	Stand—Valve Body
C-3752	Remover—Front Oil Pump and Reaction Shaft Support
C-3763	Gauge—Throttle Pressure Setting
C-3765	Installer—Shifter Shaft Detent Ball
C-3887	Kit—Service Bushing Removing and Installing

6 Cyl. Vehicles

C-3283	Studs—Pilot
C-3575	Compressor—Front Clutch Piston Spring
C-3750	Stand—Transmission
C-3751	Installer and Burnisher—Extension Housing Bushing
C-3753	Remover—Output Shaft Oil Seal